



# SKIRTINGS

These high quality, embossed wrapped skirtings are ideal for any home, or office, because they are water and scratch resistant.

# APPLICATION GUIDE:

## SELF-ADHESIVE SKIRTINGS

### TESA TAPE

- The workplace must be free of dirt, dust, grease, oil, moisture and other contaminants.
- The wall (surface) must be cleaned free of dirt and dry.
- The recommended application temperature is between 15°C and 35°C
- Remove the liner from the skirting board (panel).
- Line up or carefully position the skirting board (panel).
- Position the skirting board onto the wall.
- Apply sufficient pressure using a tool across the face of the panel.

## NON SELF-ADHESIVE SKIRTINGS

- The workplace must be free of dirt, dust, grease, oil, moisture and other contaminants.
- The wall (surface) must be cleaned free of dirt and dry.
- The recommended application temperature is between 15°C and 35°C
- Remove the liner from the skirting board (panel).
- Line up or carefully position the skirting board (panel).
- Position the skirting board onto the wall.
- Apply sufficient pressure. A good tip: Use a rubber mallet or the side of your fist to ensure correct pressure. (This is extremely important for good adhesion.)

# PRECISION AND PERFECTION **DESIGNER SKIRTING**

Available in five different colours (plus natural)



ALABASTER OAK



ROUGH SAWN



GREY WASHED OAK



WHITE



EBONY

- 3D paper wrapped MDF skirting
- No more nailing required
- No more glue required
- Just cut peel and stick
- Hi tech industrial double sided tape

# INSTALLATION INSTRUCTIONS:

## **Fixing:**

Use no more nails or similar product

## **Cutting:**

If using hand saw paper coating must face upwards

If using electric machine, skill saw, or jig saw paper must face downwards

## **Cleaning:**

Use a damp cloth


## **Coating:**

Water resistance paper wrap.



## **How to add the butt joints:**

1. Use a mitre box and sharp fine toothed saw to cut the skirting.
2. The joints that are in a straight line on the wall do not need a mitre, a butt joint will be sufficient.
3. Please note before peeling off the double sided tape, you need to apply the wax to the joints and then peel off the double sided tape that lines up on the wall. Apply pressure.
4. How to ensure the double sided tape is properly stuck to the wall: Use a rubber mallet or the side of your fist and just tap the skirting.





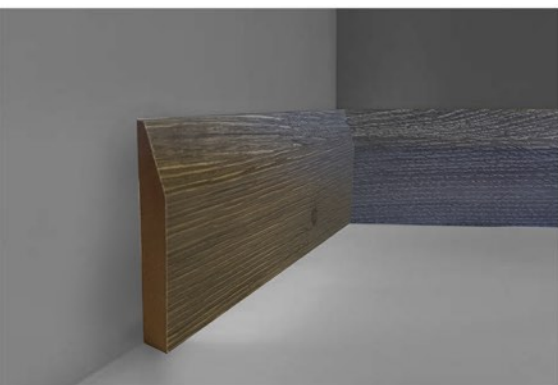


**ALABASTER**  
70/100 x 2700mm

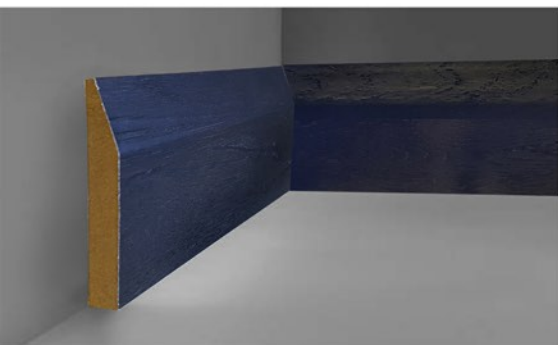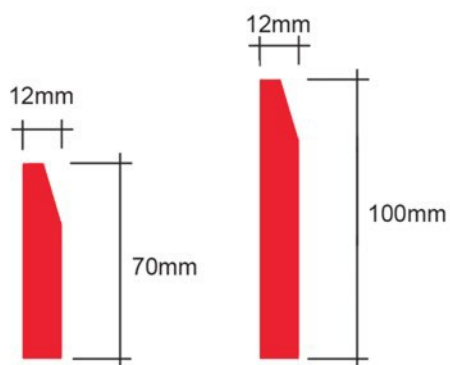


**EBONY**  
70/100 x 2700mm

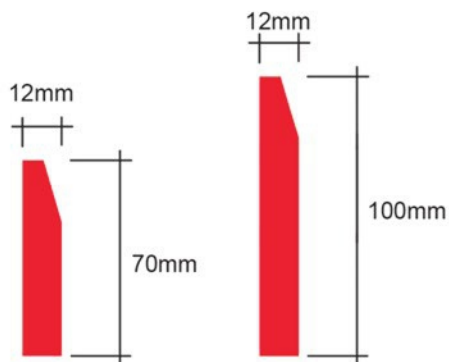

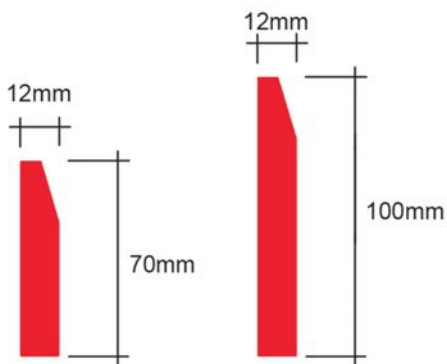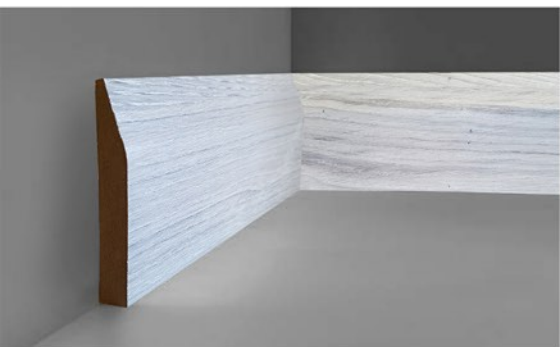

## **WASHED GREY OAK**

70/100 x 2700mm

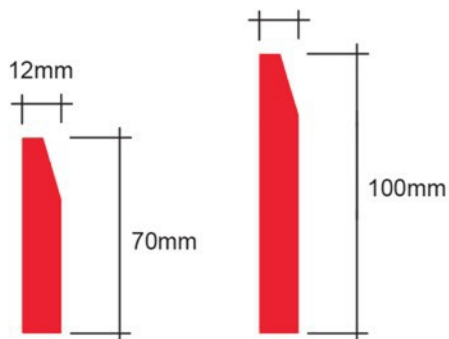

## **ROUGH SAWN OAK**

70/100 x 2700mm



[www.finishingtouchessa.co.za](http://www.finishingtouchessa.co.za)